
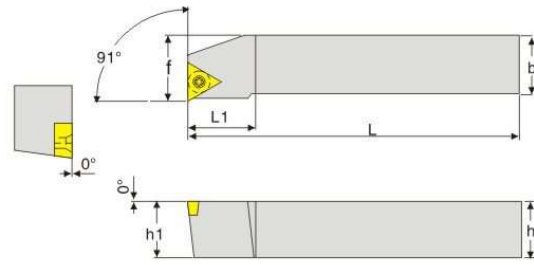


外圆刀(螺钉式) External Turning Holder(S-type)


STFCR/L

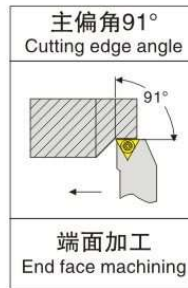

型号 Model	刀片 Insert 	适用条件 Applicable conditions						配件 Accessories 	
		h	b	L	L1	h1	f	螺丝 Screw	扳手 Wrench
STFCR/L1010E09	TC□□T0902□□	10	10	70	12	10	10	M2.2×6	T6
STFCR/L1212F11	TC□□T1102□□	12	12	80	16	12	16		
STFCR/L1616H11		16	16	100	16	16	20	M2.5×8	T8
STFCR/L1616H16	16	16	100	16	16	20			
STFCR/L2020K16	TC□□T16T3□□	20	20	125	22	20	25	M4×10	T15
STFCR/L2525M16		25	25	150	22	25	32		

外圆刀(螺钉式) External Turning Holder(S-type)

STTCR/L

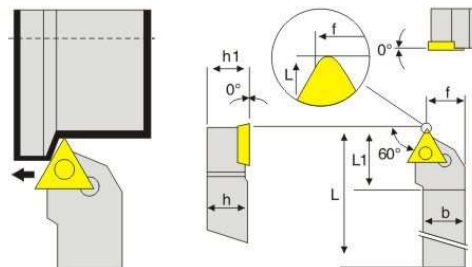

型号 Model	刀片 Insert 	适用条件 Applicable conditions						配件 Accessories 	
		h	b	L	L1	h1	f	螺丝 Screw	扳手 Wrench
STTCR/L1616H11	TC□□T1102□□	16	16	100	14	16	13	M2.5×6	T8
STTCR/L1616K16	TC□□T16T3□□	16	16	100	19	16	13		
STTCR/L2020K16		20	20	125	19	20	17	M4×10	T15

